

MagnaPaper presents Anywhere Dry Erase

Comes in a Roll - Goes where you need it !

Use it at Home

Instructions for use

Anywhere dry erase is designed to stick to most smooth surfaces. Surface texture and certain wall coverings may prevent adhesion. Before application, repair surface defects and make sure the surface is clean and dry. Simply cut the sheet to size with scissors, remove the release liner and apply it to the desired surface. It is not unusual for the release liner to pull off small amounts of adhesive or some of the black backside coating. This will not affect the performance of your dry erase panel.

Starting at one side and working from the middle out to the edges, smooth the sheet with a dry soft cloth to remove any trapped air bubbles. If it's not the way you want it, just peel the sheet and try again.

For best results, clean the dry erase surface before use with a soft cloth and "window cleaner" or white board cleaner solution.

For a more "finished" look and to avoid "overwriting" the board, apply colored vinyl tape to the outside edges.

While the product is specifically designed to easily release from the wall, certain finishes and surfaces may cause the adhesive to stick more aggressively. Removal of the panel in these cases may damage the wall, the panel or both. MagnaPaper and its distributors cannot be held responsible for any damage. Any product residue left on the wall can be easily removed with a damp sponge.

This product is for indoor use only. Do not wet back or use when adhesive is wet. If adhesive gets wet, allow to dry completely before use.

MagnaPaper Anywhere Dry Erase is specifically designed for use with dry erase markers. To remove permanent markers from the surface, spray with a "window cleaner" or white board cleaner type product and wipe clean while wet. Or simply use a dry erase marker to draw over the permanent lines and rub clean while wet. Either method may take several "cleanings" to remove the marks.

Use it at School

Resurfacing a chalkboard or dry erase board

First clean the board surface thoroughly to remove any dust or blemishes. Nicks, dings, and seams that stick above or below the board surface may show through the dry erase skin and cause excessive wear - so fill in holes and cracks and lightly sand raised surfaces until they are even with the surrounding area. If the board to be covered is smaller than the dry erase skin, precut the skin to a size close, but slightly larger than the board. Installation is usually easier with 2 people. Lay the cut panel upside down on a tabletop or drop cloth and carefully remove the release liner. It is not unusual for the release liner to pull off small amounts of adhesive or some of the black backside coating. This will not affect the performance of your dry erase panel.

Be careful when handling the panel, as creases and dents caused by improper handling may be permanent.

Starting at the center, stick the skin on the board so that it slightly overlaps the board frame. Working across the board and from the center towards the edges, stick the skin to the board using a soft cloth rag. Push any trapped air bubbles out as you move across the board. If needed, gently pull the skin off the board and re-stick to remove any trapped air bubbles. When you have finished, simply use a sharp knife to trim the skin to size. For better edges, use a yardstick or other long flat device to "push" the skin into the edges and use the board frame as an edge guide for trimming.

For best results, use professional wallpaper installers to cover larger boards.

Once applied to a chalkboard or dry erase board, the panels are designed to be removable, not repositionable. Removal may permanently damage the panel. Any product residue left on the board can be easily removed with a damp sponge.

Clean the dry erase surface before use with a soft cloth and "window cleaner" or white board cleaner solution.

MagnaPaper products are intended for use with flat sheet magnets available at most office supply stores. Molded magnets and those recessed in metal or plastic clips, letters, etc. will not "stick" to our products.

Reorder from Resources for Reading

1-800-ART-READ or online at abcstuff.com